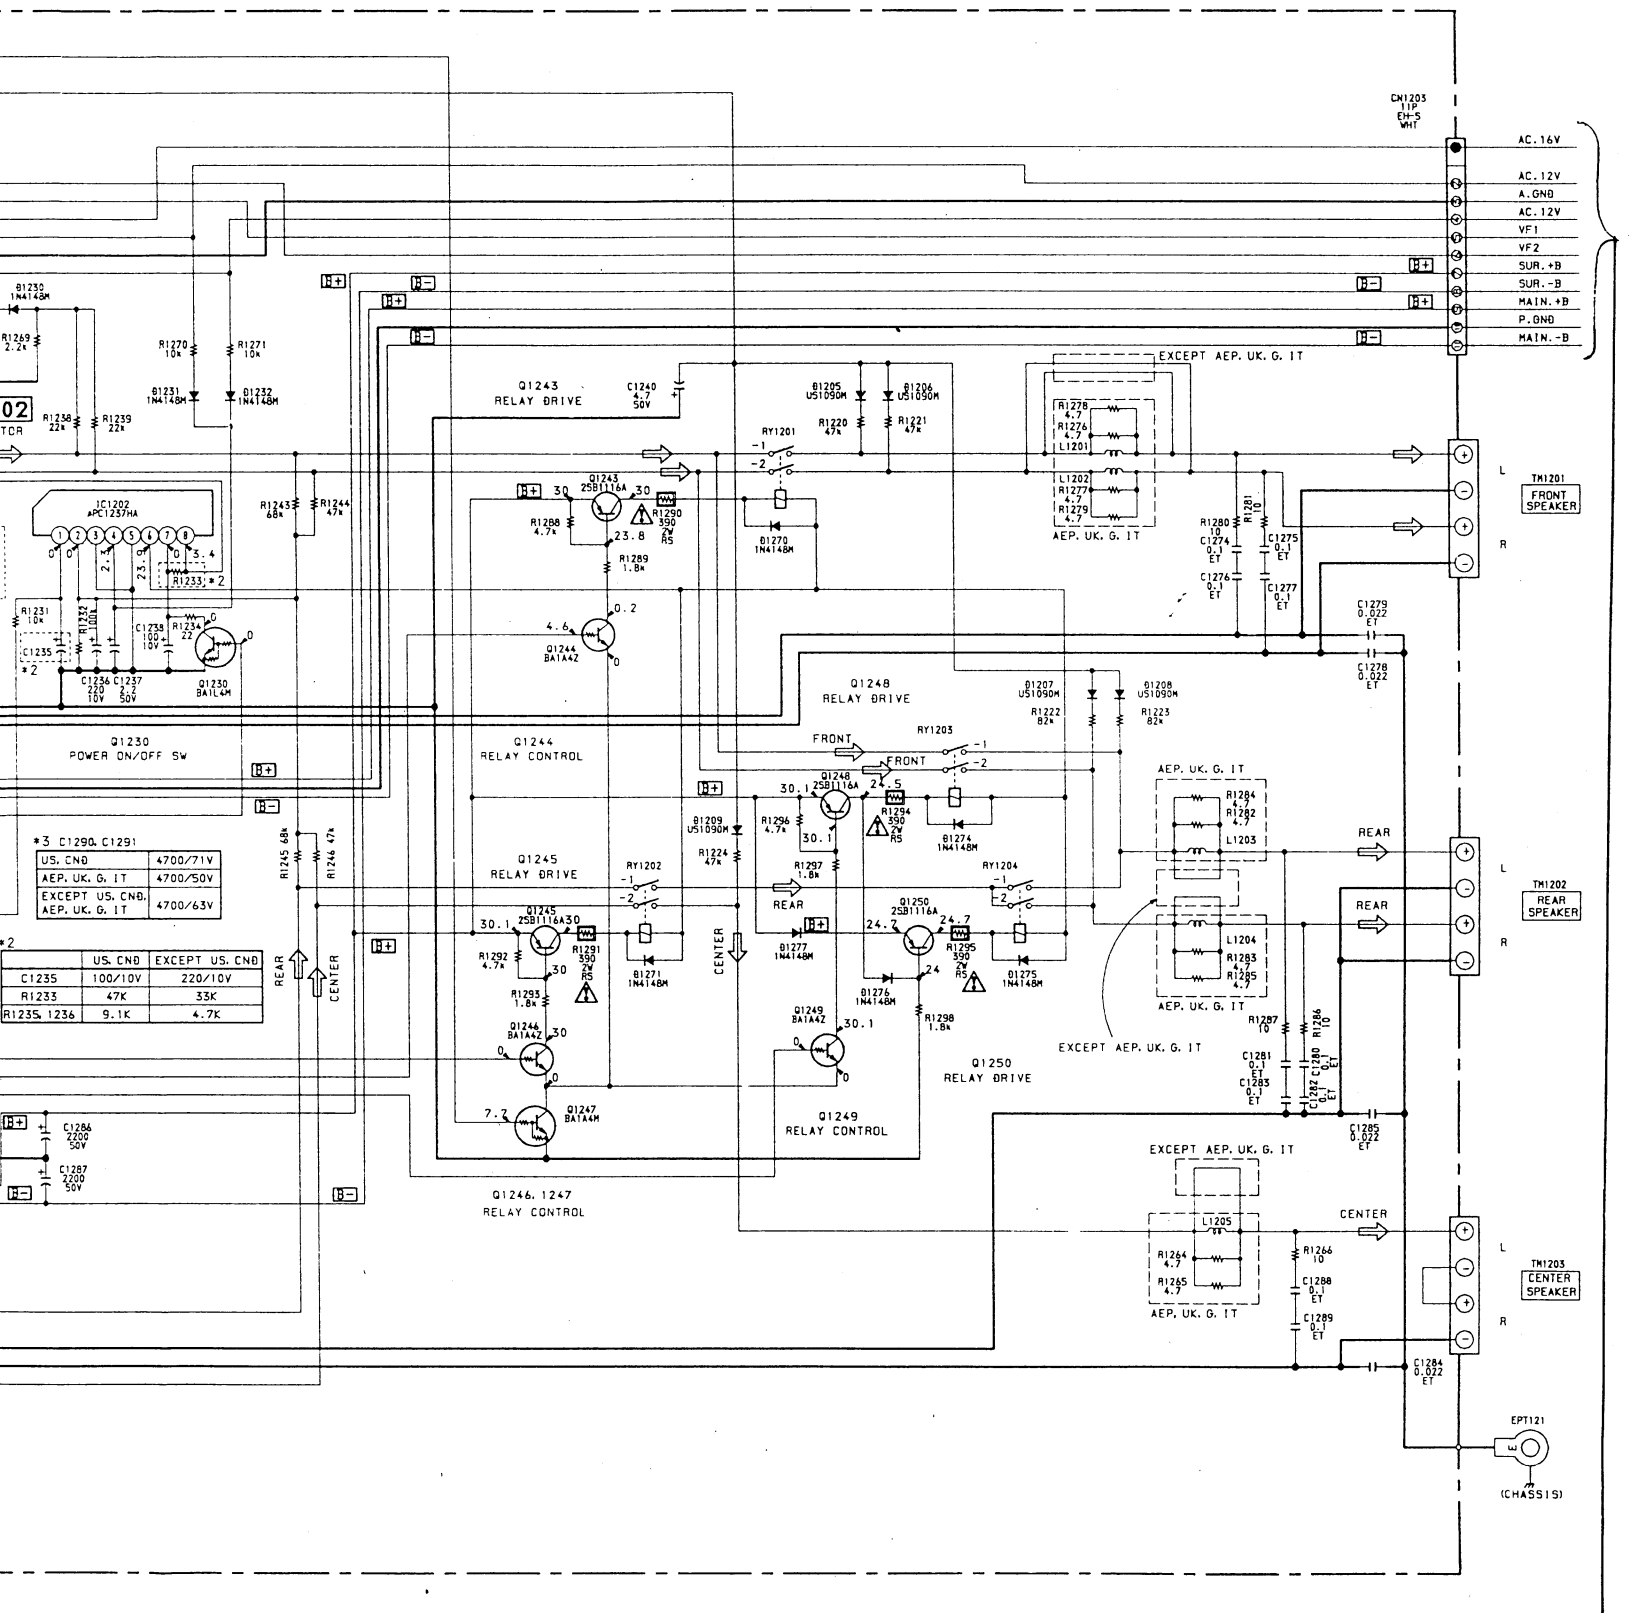
CN1205
11P
EH-S
WHT
AC.16V
AC.12V
A.GND
AC.12V
VF1
VF2
SUR.+B
SUR.-B
MAIN.+B
P.GND
MAIN.-B
TM1201
FRONT SPEAKER
TM1202
REAR SPEAKER
TM1203
CENTER SPEAKER
EPT121
(CHASSIS)
Q1230
POWER ON/OFF SW
Q1243
RELAY DRIVE
Q1244
RELAY CONTROL
Q1245
RELAY DRIVE
Q1246, 1247
RELAY CONTROL
Q1248
RELAY DRIVE
Q1249
RELAY CONTROL
Q1250
RELAY DRIVE
IC1202
APC1237HA
RY1201
RY1202
RY1203
RY1204
EXCEPT AEP, UK, G, IT
AEP, UK, G, IT
FRONT
REAR
CENTER
*3 C1290, C1291
US, CND 4700/71V
AEP, UK, G, IT 4700/50V
EXCEPT US, CND, AEP, UK, G, IT 4700/63V
*2
US, CND EXCEPT US, CND
C1235 100/10V 220/10V
R1233 47K 33K
R1235, 1236 9.1K 4.7K